


Digital Desk Clock

Model DG-C2

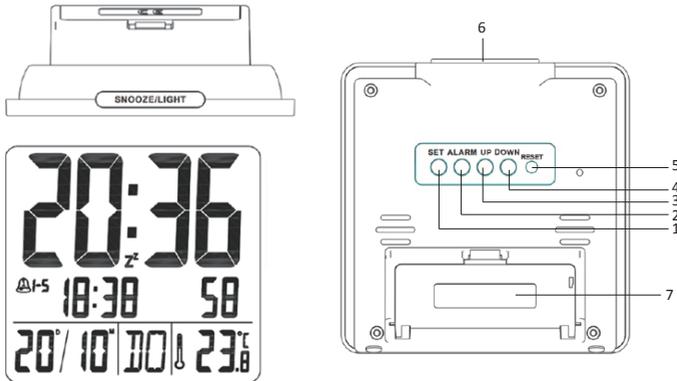

MAIN UNIT

1. SET
2. ALARM
3. UP
4. DOWN
5. RESET
6. SNOOZE/LIGHT
7. BATTERY COMPARTMENT COVER

FEATURES

- 6 buttons: SET, ALARM, UP, DOWN, RESET, SNOOZE/LIGHT.
- Indoor temperature range: $-10^{\circ}\text{C} \sim +50^{\circ}\text{C}$
- 12/24 hour format selectable.
- Hour, min and second display.
- Work day alarm (1-5), weekend alarm (6-7).
- Backlight automatically turn on/off when alarm is on/off.
- Alarm sound frequency increases the longer the alarm sounds up to 5 minutes.
- 8 optional languages for weekday display: German, English, Italian, French, Dutch, Spanish, Hungarian and Slovenian.
- Alarm and snooze function, alarm will be delayed 8 minutes after pressing "snooze" button.
- Blue LED backlight automatically turn on/off when alarm is on/off.
- Power by 1xAA battery, 1.5V.
- Temperature display with options to select $^{\circ}\text{C}$ or $^{\circ}\text{F}$.

GETTING STARTED

POWER SUPPLY

1. Remove the battery compartment cover.
2. Insert 1 x AA battery matching the correct polarity(+/-).
(Note: When the clock is first powered by the battery, all of the segments of the LCD display and the blue LED backlight will go on for 2 seconds. This is normal.)

TIME SET

1. Press and hold "SET" to start time setting.
2. Setting order is : language → 12/24 hour → year (2000-2099) → D/M or M/D → month → day → hour → min → exit.
3. Press "up" once, the setting item will increase by one unit, press and hold "up", the setting item will increase by 8 units/second.
4. Press "down" once, the setting item will decrease by one unit, press and hold "down", setting item will decrease by 8 units/second.
5. No buttons are pressed for more than 20 seconds, setting mode will be exited and returned to time mode.

ALARM SET

IMPORTANT: There are two alarm modes on the clock:

Weekday alarm (Monday to Friday) "1-5" displays on the LCD

Weekend alarm (Saturday & Sunday) "6-7" displays on the LCD

1. Press and hold "alarm" to start alarm setting.
2. Setting order is: alarm1 (1-5) hour → alarm1 (1-5) min → alarm2 (6-7) hour → alarm2 (6-7) min → exit.
3. Press "alarm" to confirm the setting and move to next setting item.
4. Press "up" once, the setting item will increase by one unit, press and hold "up", setting item will increase by 8 units/second.
5. Press "down" once, the setting item will decrease by one unit, press and hold "down", setting item will decrease by 8 units/second.
6. At normal mode, press "up" to turn on/off alarm1 (1-5). If the alarm 1 is on,  this symbol will show on the display to remind user that work day alarm is working.
7. At normal mode, press "down" to turn on/off alarm 2 (6-7). If the alarm 2 is on,  this symbol will show on the display to remind user that weekend alarm is working.
6. No buttons are pressed for more than 20 seconds, setting mode will be exited and returned to time mode.

SNOOZE FUNCTION

Alarm ring:

a) alarm will last for 5 mins.

b) Alarm tone:

0-10 seconds: One beep per second

11-20 seconds: Two beeps per second

21-30 seconds: Three beeps per second

>31-300 seconds: Four beeps per second

c) Press the "SNOOZE/LIGHT" button for 8 minutes of snooze time, the "Zz" will flash on LCD. To cancel snooze, press any other button on the clock.

d) The alarm time has no limit, so it will repeat infinitely. To stop the alarm, press any other button on the clock. The alarm will ring 24 hours later if it is still set.

TEMPERATURE

1. Temperature ranges: $-10^{\circ}\text{C} \sim 50^{\circ}\text{C}$ ($14^{\circ}\text{F} - 122^{\circ}\text{F}$)

2. The indoor temperature will display within 3-8 minutes automatically after set up.

3. Press "SET" button to switch between Celsius or Fahrenheit.

4. The temperature will show "HH" if the temperature is higher than 50°C (122°F)

5. The temperature will show "LL" if the temperature is lower than -10°C (14°F)

WEEKDAY LANGUAGES DISPLAY

German	English	Italian	French	Dutch	Spanish	Hungarian	Slovenian
MO	MO	LU	LU	MA	LU	HE	PO
DI	TU	MA	MA	DI	MA	KE	TO
MI	WE	ME	ME	WO	MI	SE	SR
DO	TH	GI	JE	DO	JU	CS	CE
FR	FR	VE	VE	VR	VI	PE	PE
SA	SA	SA	SA	ZA	SA	SO	SO
SO	SU	DO	DI	ZO	DO	VA	NE

PRECAUTIONS

- Do not clean any part of the product with benzene, thinner or other solvent chemicals. When necessary, clean it with a soft cloth.
- Never immerse the product in water. This can cause electrical shock and damage the product.
- Do not subject the product to extreme force, shock, or fluctuations.
- Do not tamper with the internal components.
- Do not mix new and old batteries or batteries of different types.
- Do not mix alkaline, standard or rechargeable batteries with this product.
- Remove the batteries when storing this product for a long period of time.
- Do not dispose of this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.