




OPERATING INSTRUCTIONS

Large Screen Thermometer Hygrometer

Model: DG-TH1180

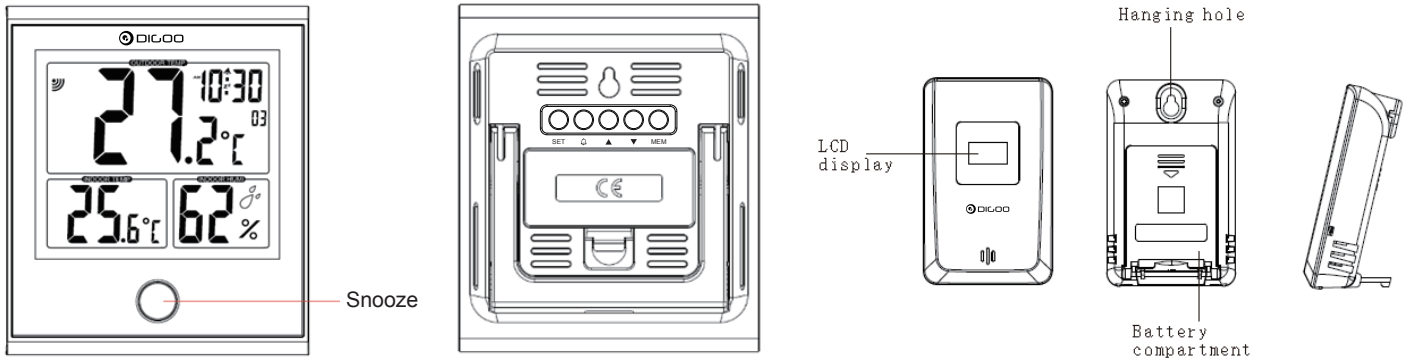

POWERING ON

Open the battery compartment cover. Insert batteries according to the correct polarity showed in the compartment. The main unit needs 2 x AAA batteries, and the sensor needs 2 x AAA batteries. After powering on, the clock will take about 3 minutes to connect with the outdoor transmitter. When connecting, the signal symbol 📶 would be flashing on the screen.

TIME SETTING

At normal time displaying mode, hold pressing **SET** button till entering the time setting mode. The figure will be flashing. Press ▲ or ▼ button to adjust the values. Hold pressing ▲ or ▼ button, the digit will move faster. The setting order is 12/24 Hr → hour → minute → year → month → date → exit. If there is no more operation for 30 seconds, it will save the existing setting and turn to normal display or press **SET** button again to confirm the setting.

At normal time displaying mode, press **SET** button once to check the calendar.

ALARM SETTING AND SNOOZE FUNCTION

At normal time displaying mode, press 🔔 button once to check the setting alarm time. Press 🔔 button once more to turn on the alarm function. There is an alarm symbol 🔔 on the screen.

At the alarm setting mode, hold pressing 🔔 button to set the alarm time. Press ▲ or ▼ button to adjust. Hold pressing ▲ or ▼ button, the digit will move faster. The setting order is hour → minute → exit. If there is no more operation for 30 seconds, it will save the existing setting and turn to normal display or press 🔔 button again to confirm the setting.

The alarm sound will last for 2 minutes and it will change as below:

0-8 seconds: BI per second

9-19 seconds: BI BI per second

20-59 seconds: BI BI BI per second

>60 seconds: Keep BI

* When the alarm ring is on, press any other button to cancel the alarm sound. The alarm will be on again after 24 hours.

* To turn off the alarm, press 🔔 button until the alarm symbol 🔔 disappears on the screen.

TEMPERATURE

Press ▲ or ▼ button to switch °C/°F display

Indoor temperature range: 0°C~ +50°C

Indoor humidity range: 20%-95%

Outdoor temperature range: -20°C~ +60°C

TEMPERATURE RECORD

Press **MEM** button to switch between the maximum and minimum record of in/out temperature and indoor humidity.

Hold pressing **MEM** to clear the maximum and minimum record and recalculate.

Clock will clear the maximum and minimum record automatically at 0:00 and restart recording.

Tips:

1. Please remove the membrane on the screen before you use this product.
2. Please note that, if the screen is becoming too fuzzy to recognize the digit, that means you need to change the battery for DG-TH1180, and please kindly set the time again after battery changed.
3. Do not clean any part of the product with benzene, thinner or other solvent chemicals. When necessary, clean it with a soft cloth.
4. Never immerse the product in water. This can cause electrical shock and damage the product.
5. Do not subject the product to extreme force, shock, or fluctuations in temperature or humidity.
6. Do not tamper with the internal components.
7. Do not mix new and old batteries or batteries of different types.
8. Do not mix alkaline, standard or rechargeable batteries with this product.
9. Remove the batteries if storing this product for a long period of time.
10. Do not dispose of this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.